



Glow Plug Troubleshooting D51, 62 Engines


Glow plugs do not work. Part 1

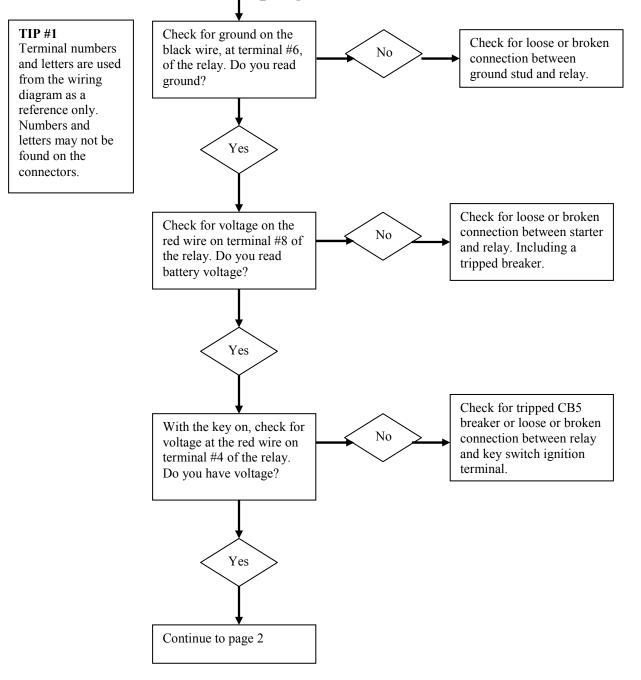

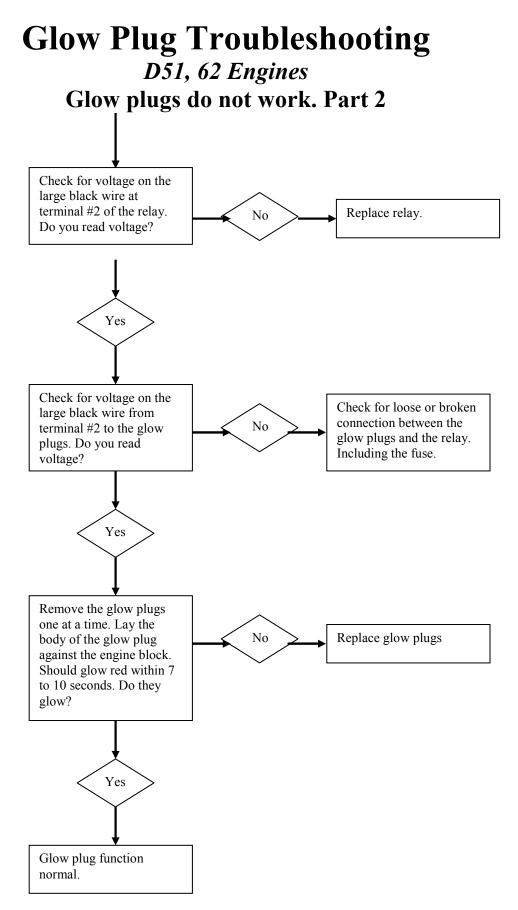

Glow Plug Troubleshooting D51, 62 Engines

Glow plug light does not come on. All other glow plug functions normal.

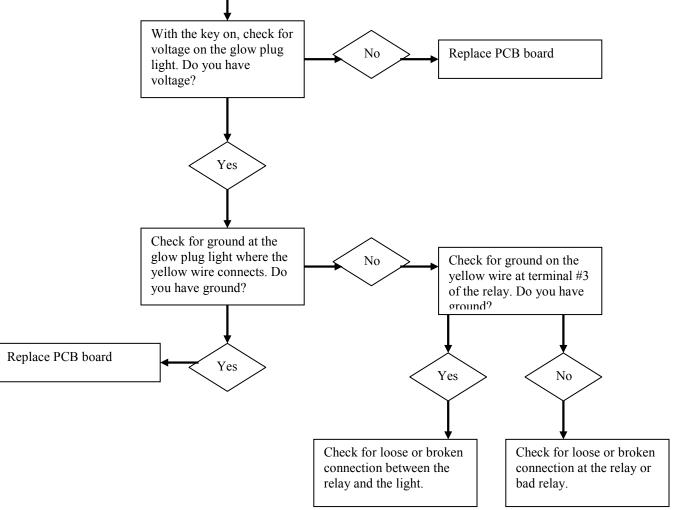

Glow Plug Troubleshooting D51, 62 Engines

Glow plug light does not go off when engine started. All other glow plug functions normal.

