


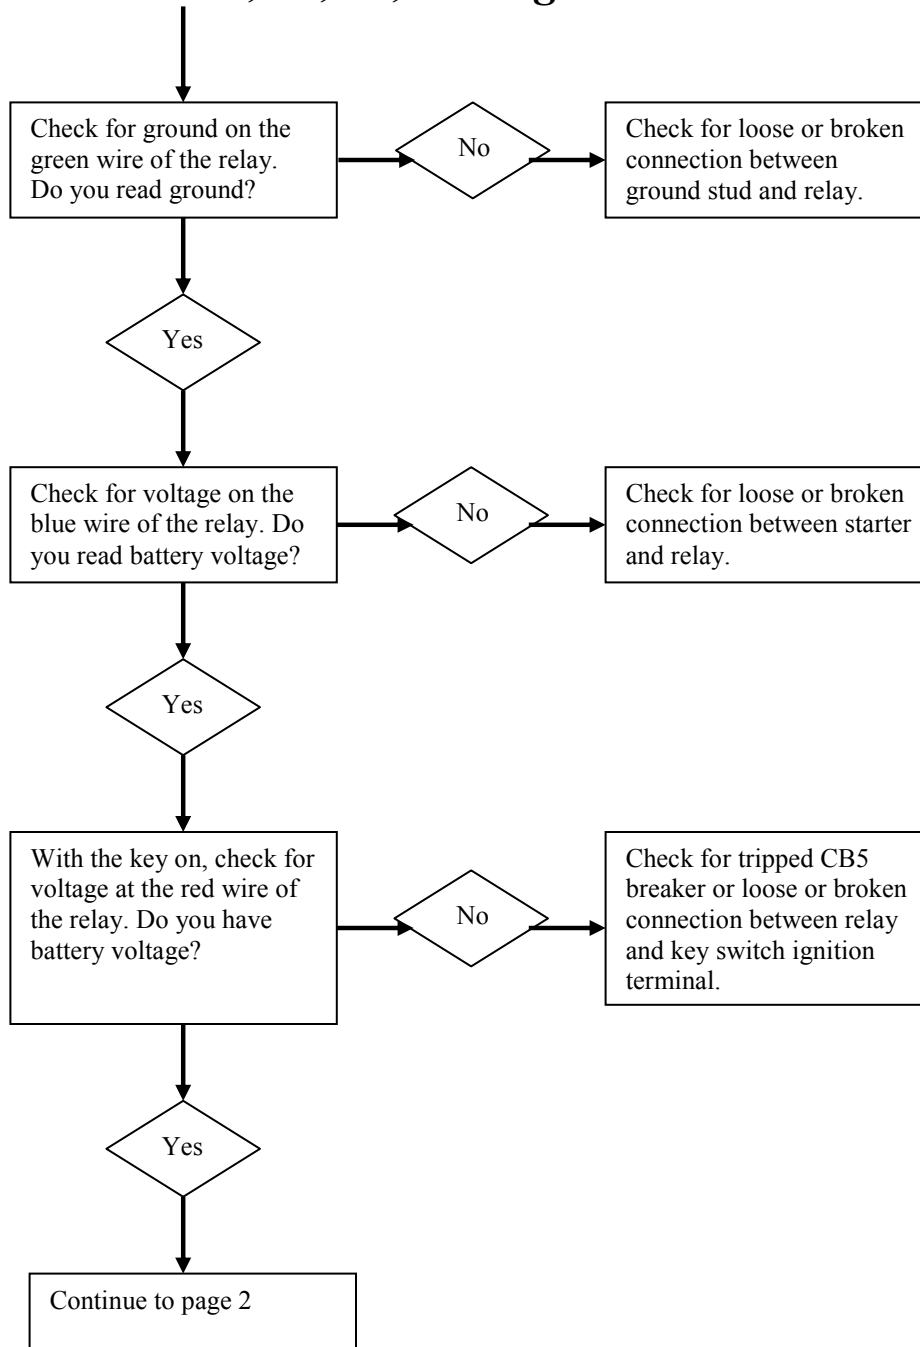


Glow Plug Troubleshooting

D30, 33, 40, 42 Engines



Glow Plug Troubleshooting


D30, 33, 40, 42 Engines

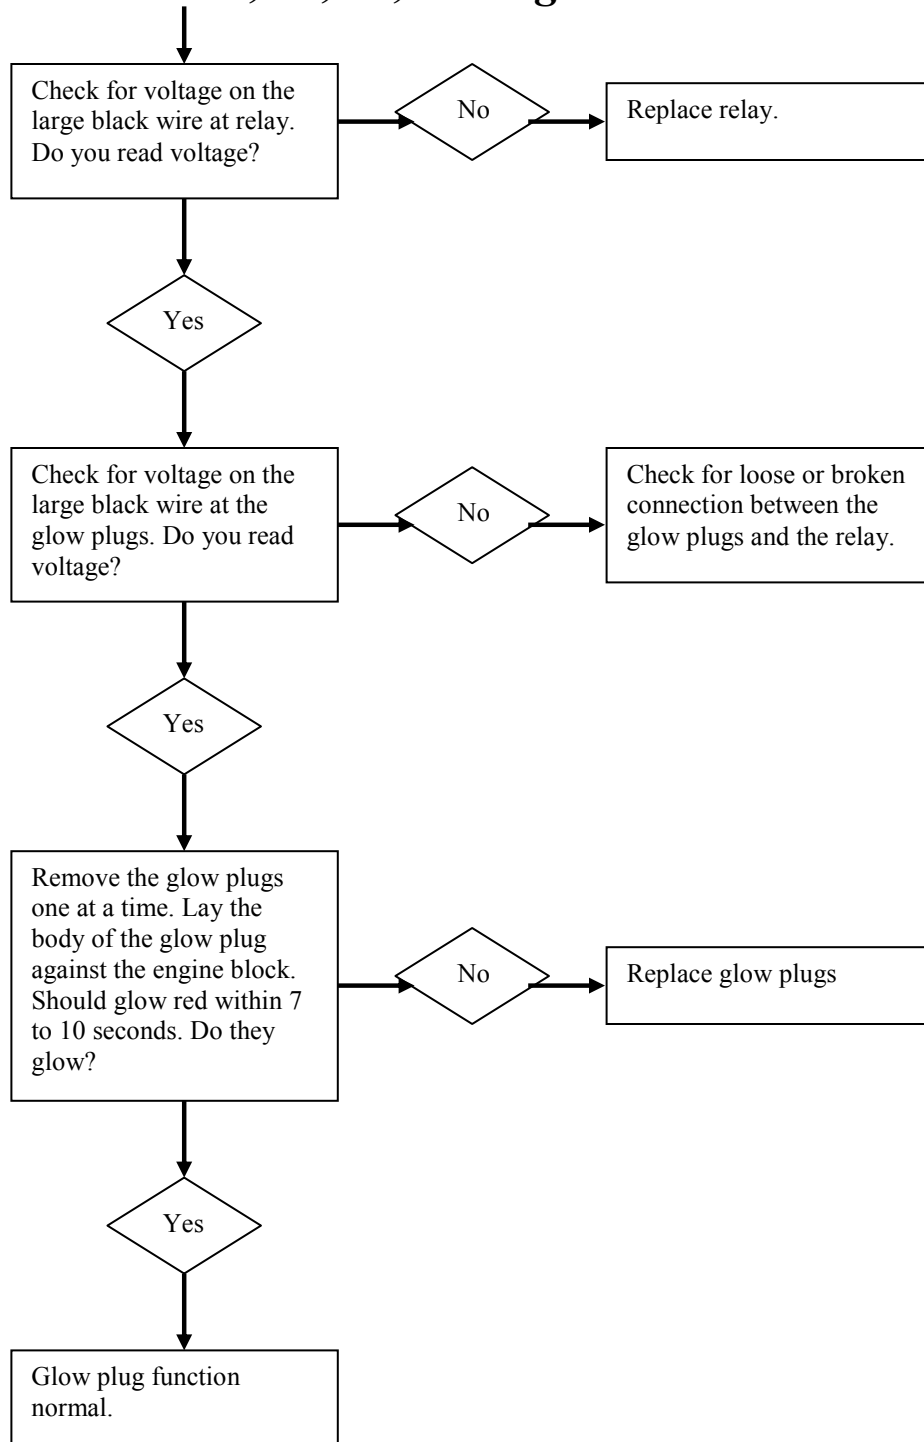

Glow Plug Troubleshooting

D30, 33, 40, 42 Engines

Glow plug light does not come on. All other glow plug functions normal

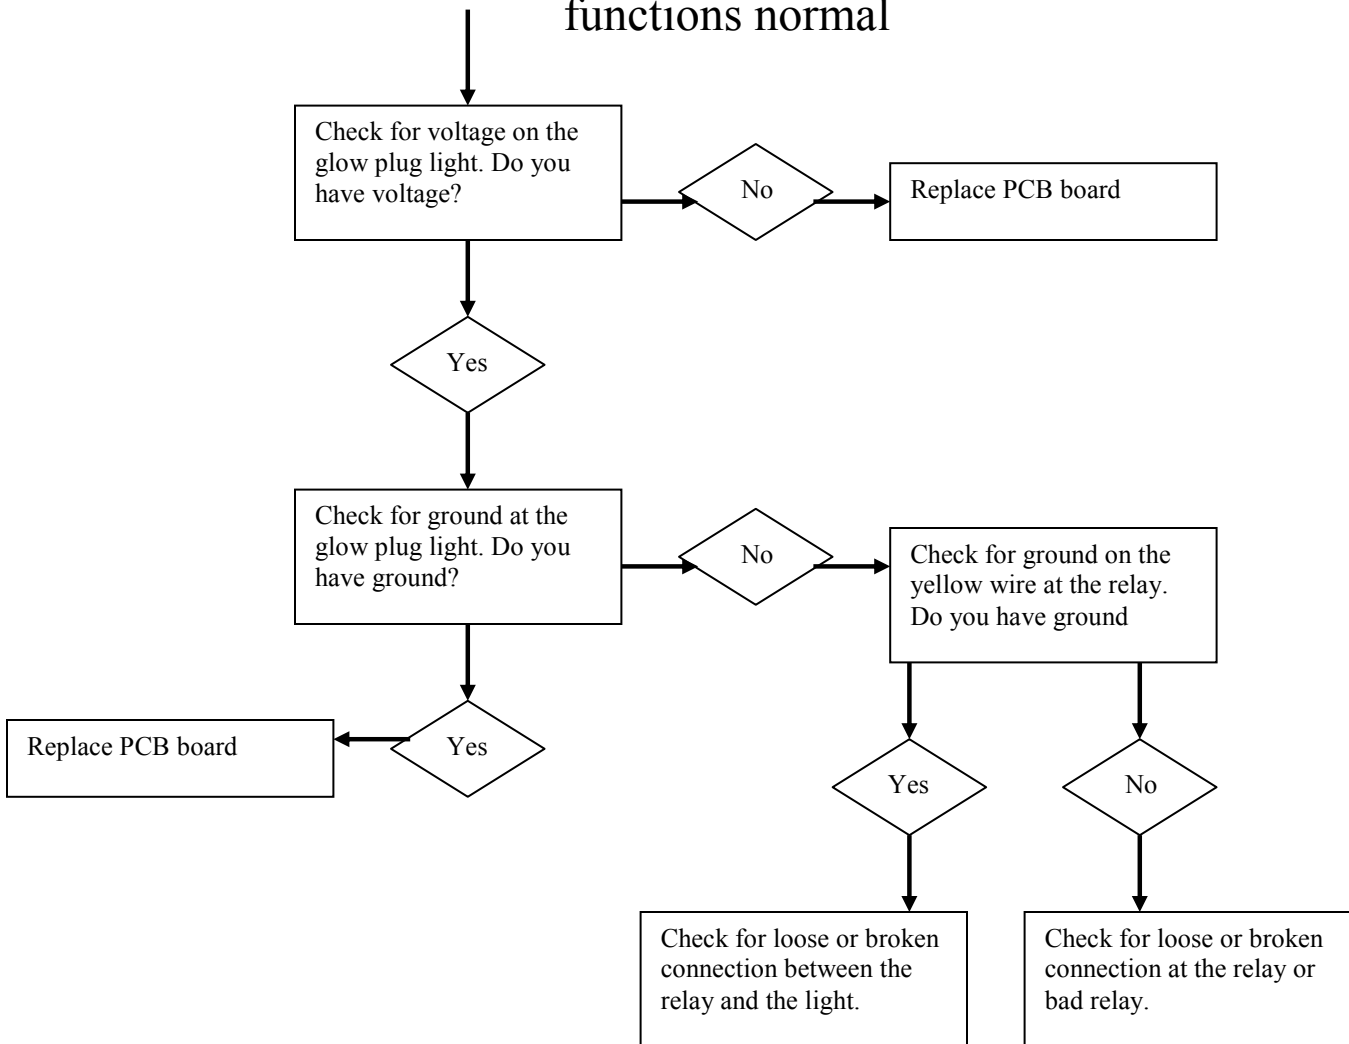

Glow Plug Troubleshooting

D30, 33, 40, 42 Engines

Glow plug light does not go off when engine started. All other glow plug functions normal.

